

Model	SFN series installation dimension and terminal arrangement
SFN-9K1-I	
SFN-9K1-U	
SFN-9K1-F	
SFN-9K1-H	
SFN-9K1-P	
SFN-9K3-3I	
SFN-9K3-3U	
SFN-9K3-UIF	
SFN-8K1-I	
SFN-8K1-U	
SFN-8K1-F	
SFN-8K1-H	
SFN-8K1-P	
SFN-7K1-I	
SFN-7K1-U	
SFN-7K1-F	
SFN-7K1-H	
SFN-7K1-P	
SFN-5K1-I	
SFN-5K1-U	
SFN-5K1-F	
SFN-5K1-H	
SFN-5K1-P	

Model	SFN series installation dimension and terminal arrangement
SFN-9K1-3P	
SFN-9K5-3UIF	
SFN-9K5-3UIHF	
SFN-9K5-3UIP	
SFN-9K6-3UI	
SFN-9S3-3E	
SFN-9SY-3E	
SFN-9S5-3E	
SFN-8K3-3I	
SFN-8K3-3U	
SFN-8K3-UIF	
SFN-8S3-3E	
SFN-8SY-3E	
SFN-7K3-3I	
SFN-7K3-3U	
SFN-7K3-UIF	
SFN-7S3-3E	
SFN-7SY-3E	
SFN-4K1-I	
SFN-4K1-U	
SFN-4K1-F	
SFN-4K1-H	
SFN-4K1-P	
SFN-4K3-3I	
SFN-4K3-3U	
SFN-4K3-UIF	

Model	SFS series installation dimension and terminal arrangement
SFS-9K1-I	
SFS-9K1-U	
SFS-9K1-F	
SFS-7K1-I	
SFS-7K1-U	
SFS-7K1-F	
SFS-5K1-I	
SFS-5K1-U	
SFS-5K1-F	

Model	SFS series installation dimension and terminal arrangement
SFS-9K3-3I	
SFS-9K3-3U	
SFS-9K3-UIF	
SFS-9K5-3UIF	
SFS-9K5-3UIHF	
SFS-9K5-3UIP	
SFS-9S3-3E	
SFS-9SY-3E	

Method of installation

