



Accessories

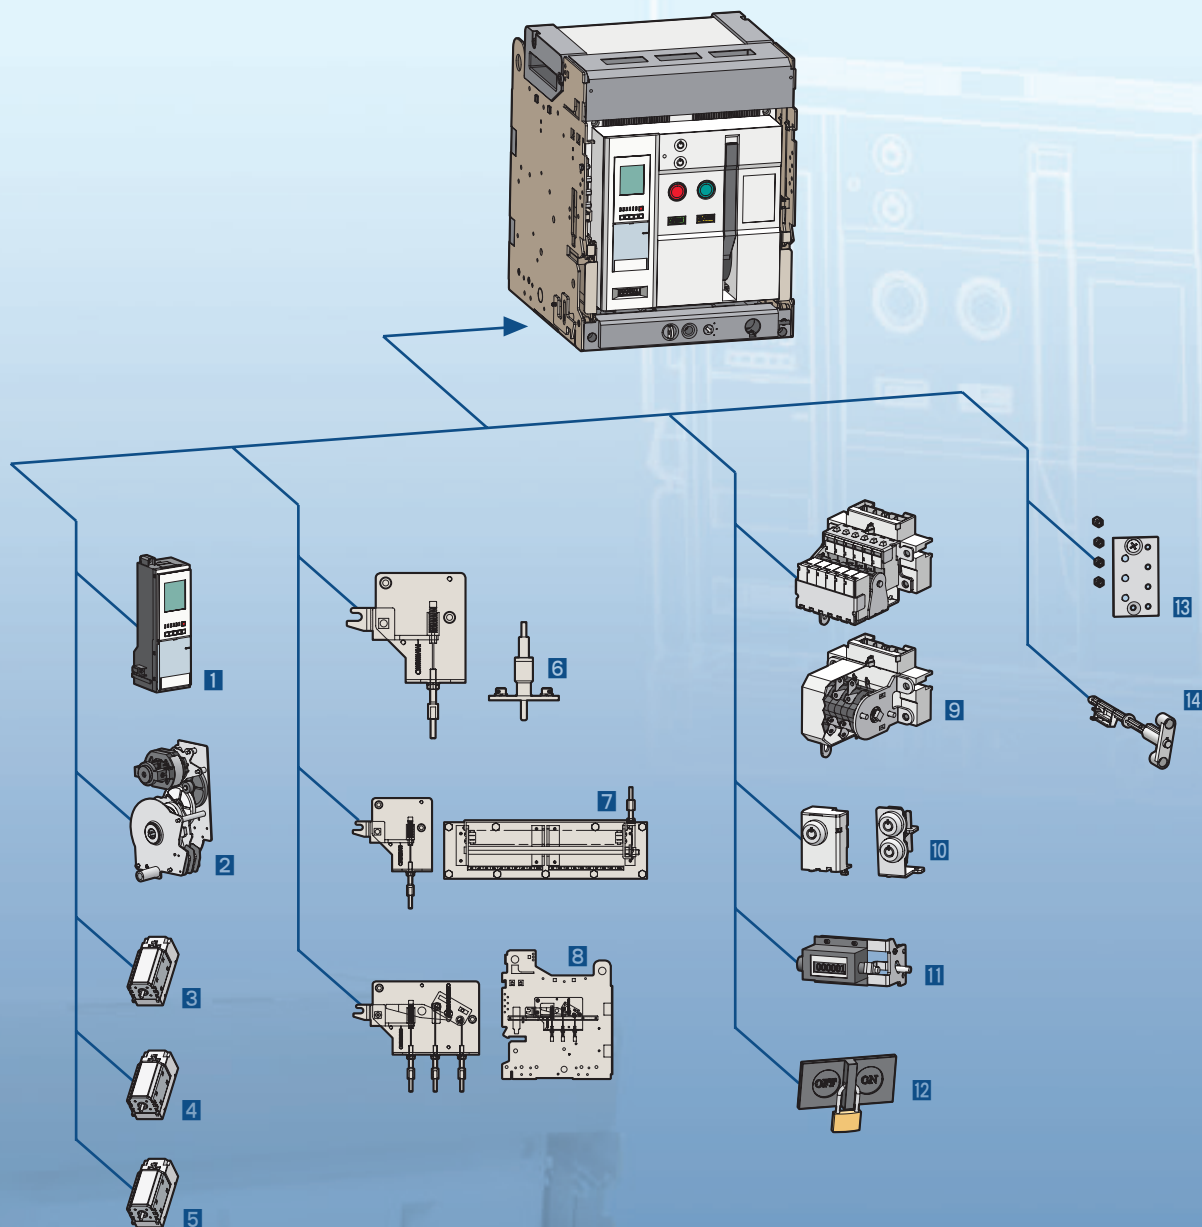

ACB

- | | |
|--|---|
| 1 Trip Relay (OCR) | 8 Mechanical Interlock (MI) |
| 2 Motor (M) | 9 Auxiliary Switch (AX) |
| 3 Closing Coil (CC) | 10 Key Lock (K1),
Double Key Lock (K3) |
| 4 Shunt Coil (SHT) | 11 Counter (C) |
| 5 Under Voltage Trip Device (UVT) | 12 On/Off Button Lock (B) |
| 6 Door Interlock (DI) | 13 Miss Insertion Preventing Device (MIP) |
| 7 MOC (Mechanical
Operated Cell Switch) | 14 Manual Reset Button (MRB) |

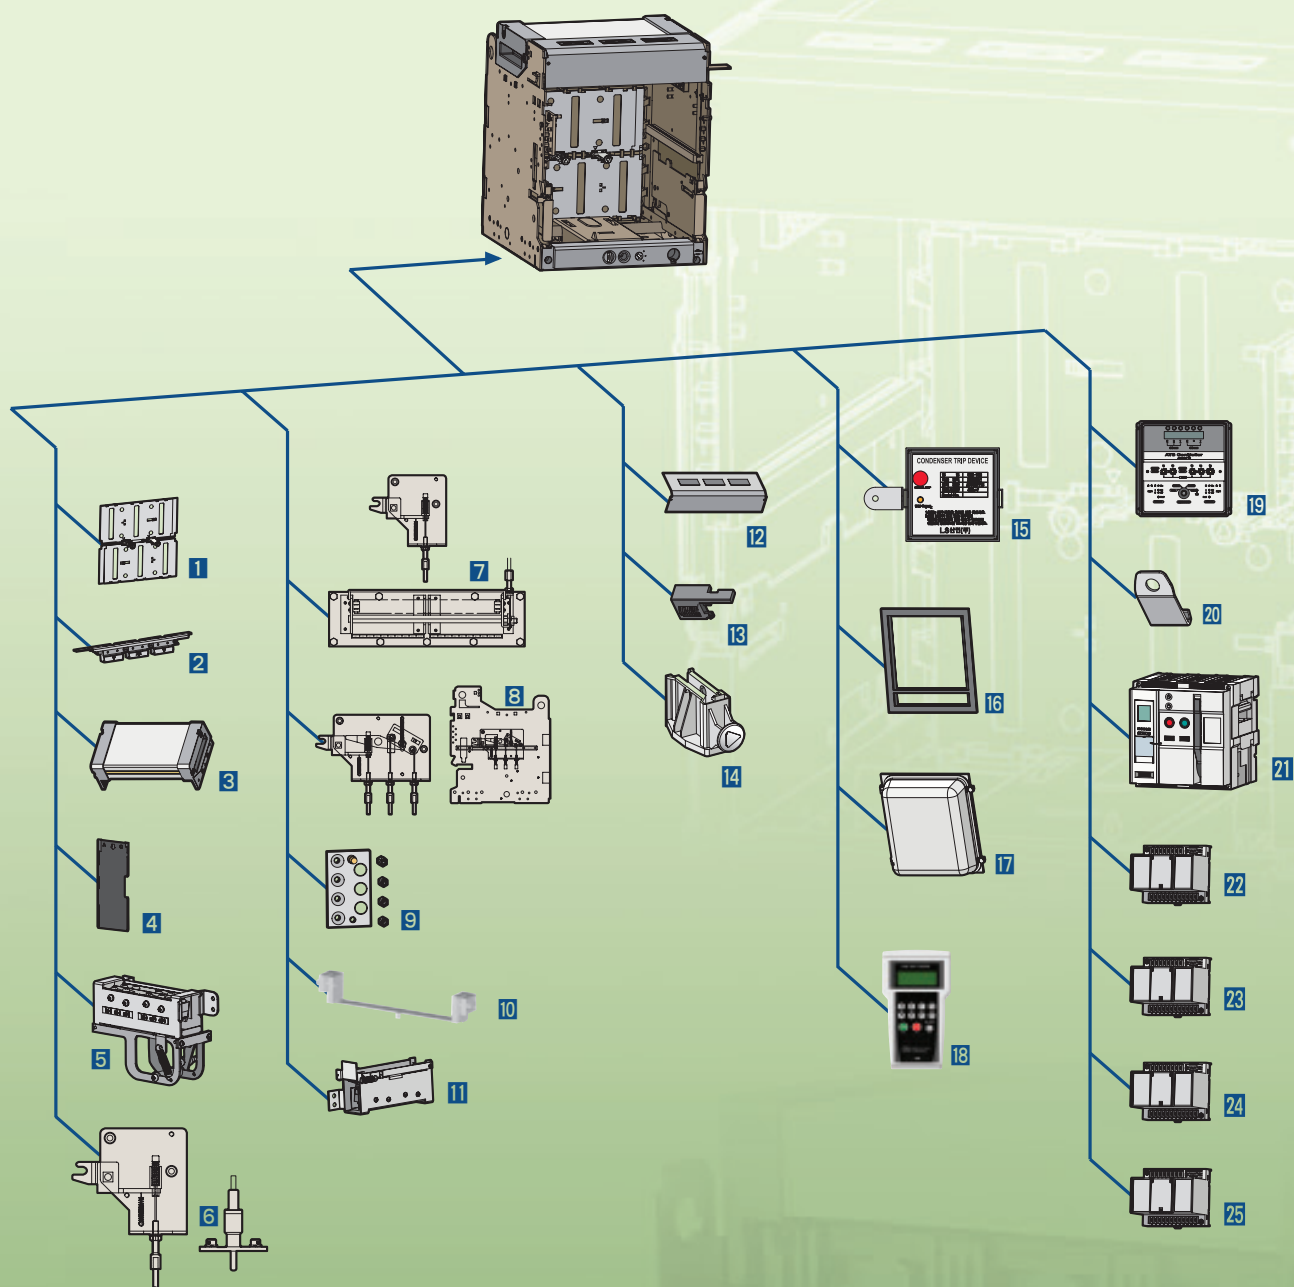

Cradle

- | | |
|---|---------------------------------------|
| 1 Safety Shutter (ST) | 8 Mechanical Interlock (MI) |
| 2 Manual Connector | 9 Miss Insertion Prevent Device (MIP) |
| 3 Zero Arc Space (ZAS) | 10 Body Supporter (BSP) |
| 4 Insulation Barrier (IB) | 11 Shorting "b" Contact (SBC) |
| 5 Cell Switch (CEL) | 12 Safety Control Cover (SC) |
| 6 Door Interlock (DI) | 13 Racking Interlock (RI) |
| 7 MOC (Mechanical Operated Cell switch) | 14 Safety Shutter Lock (STL) |

Other

- | |
|-------------------------------------|
| 15 Condenser Trip Device (CTD) |
| 16 Door Frame (DF) |
| 17 Dust Cover (DC) |
| 18 OCR Tester (OT) |
| 19 ATS Controller (ATS) |
| 20 Lifting Hook (LH) |
| 21 Dummy ACB |
| 22 UVT Time Delay Controller (UDC) |
| 23 Profibus-DP Communication module |
| 24 Remote I/O |
| 25 Temperature Alarm |

Accessories

Susol • Metasol



Mounting	Accessories		AH		AS		AN		Remark	Page
			Standard	Option	Standard	Option	Standard	Option		
Internal	SHT1	Shunt Coil	●	○	●	○	●	○	*	70
	SHT2	Double Shunt Coil		○		○			*	71
	CC	Closing Coil	●	○	●	○	●	○	*	72
	M	Motor	●	○	●	○	●	○	*	73
	CS1	Charge Switch	●	○	●	○	●	○	*	73
	CS2	Charge Switch Communication		○		○		○	*	73
	UVT	Under Voltage Trip Device		○		○		○	*	74
	AL	Trip Alarm Contact		○		○		○	*	75
	MRB	Manual Reset Button		○		○		○	*	75
	RES	Remote Reset Switch		○		○		○	*	76
	RCS	Ready to Close Switch		○		○		○	*	76
	C	Counter	●			○		○	*	83
	AX	Auxiliary Switch		○		○		○	*	77
	TM	Temperature Alarm		○		○		○	*	94
External	K1	Key Lock		○		○		○	*	78
	K2	Key Interlock Set		○		○		○	*	78
	K3	Double Key Lock		○		○		○	*	79
	B	On/Off Button lock		○		○		○	*	79
	LH	Lifting Hook		○		○		○		79
	CTD	Condenser Trip Device		○		○		○		79
	ATS	Automatic Transfer Switch Controller		○		○		○		81
	DC	Dust Cover		○		○		○		83
	DF	Door Frame		○		○		○		87
	OT	OCR Tester		○		○		○		82
	J	Manual Connector		○		○	●		*	
	A	Automatic Connector	●		●		○	*		

Note) 1. Reduplicate of AL is not available
 2. Reduplicate of Key lock is not available
 3. Reduplicate of Double shunt coil is not available. It can not be used simultaneously with UVT.
 4. RCS and CS2 cannot be used simultaneously
 5. TM and auxiliary contacts TX, TC, CC, JC cannot be used simultaneously.
 * Seperate purchasing is not allowed. Each item should be purchased with the main body.

Front connection terminal types

Connection type	Code	Description	Breaker
Front connection/Standard	62363461507	SUB ASS'Y, ADAPTER KIT ASS'Y_FRONT, AN/AS/AH-D3	D3-Frame
Front connection/Standard	62363462510	SUB ASS'Y, ADAPTER KIT ASS'Y_FRONT, AN/AS/AH-D4	D4-Frame
Front connection/Standard	62363463507	SUB ASS'Y, ADAPTER KIT ASS'Y_FRONT, AN/AS/AH-E3	E3-Frame
Front connection/Standard	62363464512	SUB ASS'Y, ADAPTER KIT ASS'Y_FRONT, AN/AS/AH-E4	E4-Frame
Front connection/Mixed	62363461508	SUB ASS'Y, ADAPTER KIT ASS'Y_F&V/H, AN/AS/AH-D3	D3-Frame
Front connection/Mixed	62363462511	SUB ASS'Y, ADAPTER KIT ASS'Y_F&V/H, AN/AS/AH-D4	D4-Frame
Front connection/Mixed	62363463506	SUB ASS'Y, ADAPTER KIT ASS'Y_F&V/H, AN/AS/AH-E3	E3-Frame
Front connection/Mixed	62363464511	SUB ASS'Y, ADAPTER KIT ASS'Y_F&V/H, AN/AS/AH-E4	E4-Frame



Mounting	Accessories		AH		AS		AN		Remark	Page
			Standard	Option	Standard	Option	Standard	Option		
Trip relay	N	N type		○		○		○	*	44
	A	A type		○		○		○	*	46
	P	P type		○		○		○	*	48
	S	S type		○					*	50
	VM	Voltage Module		○		○		○	**	54
	ZCT	ZCT for the earth leakage		○		○		○		
Cradle	SBC	Shorting "b" Contact		○		○		○		89
	MI	Mechanical Interlock		○		○		○		85
	ST	Safety Shutter		○		○		○	*	86
	STL	Safety Shutter Lock		○		○		○		86
	MIP	Miss Insertion Prevent Device		○		○		○		92
	MOC	Mechanical Operated Cell Switch		○		○		○		84
	CEL	Cell Switch		○		○		○		88
	DI	Door Interlock		○		○		○		85
	ZAS	Zero Arc Space	●			○		○	*	89
	SC	Safety Control Cover	●		●		●		***	90
	BSP	Body Supporter		○		○		○	*	90
	RI	Racking Interlock		○		○		○		91
	PL	Pad Lock/ Position Lock	●		●		●		*	91
	IB	Interphase Barrier	●			○		○	*	87
	UDC	UVT Time Delay Controller		○		○		○		93
	ADP	Compatible Adapter		○		○		○		
Other	RPH	Reverse Phase ACB		○		○		○		
	DUM	Dummy ACB		○		○		○		
	VAD	Various Connection Type		○		○		○		25
	RCO	Remote I/O		○		○		○		95
	PC	Profibus-DP comm. module		○		○		○		65

Note) 1. MI cannot be used simultaneously with DI or MOC

2. MI, DI and MOC cannot be used simultaneously with SBC.

3. CEL for right side attachment type is not available when using MI, DI and MOC.

* Separate purchasing is not allowed. Each item should be purchased with the main body.

** Voltage module should be purchased with P/S type trip relay.

*** It is available only when the control block is in the mode of auto-connection.

Option



55223460402

HANDLE ASS'Y, DRAW,
LONG




55223460404

HANDLE ASS'Y, DRAW,
LONG, AL-D, E, F, G, HXX

Accessories

Susol • Metasol

Shunt Coil [SHT1]

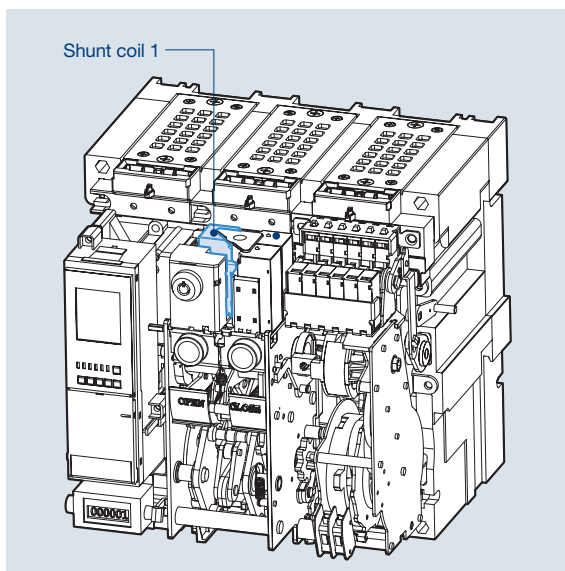


- SHT1 is a control device which trips a circuit breaker from remote place, when applying voltage continuously or instantaneously over 200ms to coil terminals(C1, C2).
- When UVT coil is installed, its location is changed.

1. Rated voltage and characteristics of trip coil

Rated voltage (Vn)		Operating voltage range (V)	Power consumption (VA or W)		Trip time (ms)
DC (V)	AC (V)		Inrush	Steady-state	
24~30	-	0.7~1.1 Vn	200	5	Less than 40ms
48~60	48	0.7~1.1 Vn			
100~130	100~130	0.7~1.1 Vn			
200~250	200~250	0.7~1.1 Vn			
-	380~480	0.7~1.1 Vn			

Note) Operating voltage range is the min. rated voltage standard for each rated voltage(Vn).

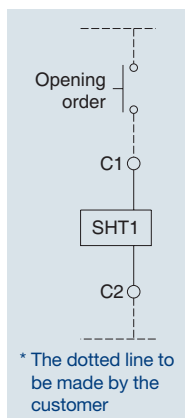

Wiring Diagram


2. Specification of the wire

- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30V or DC / AC 48~60V of rated voltage.

The maximum wire length

		Rated voltage (Vn)			
		DC 24~30V		DC / AC 48V	
Wire type		#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)	#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)
Operating voltage	100%	95.7m	61m	457.8m	287.7m
	85%	62.5m	38.4m	291.7m	183.2m

Double Shunt Coil [SHT2]

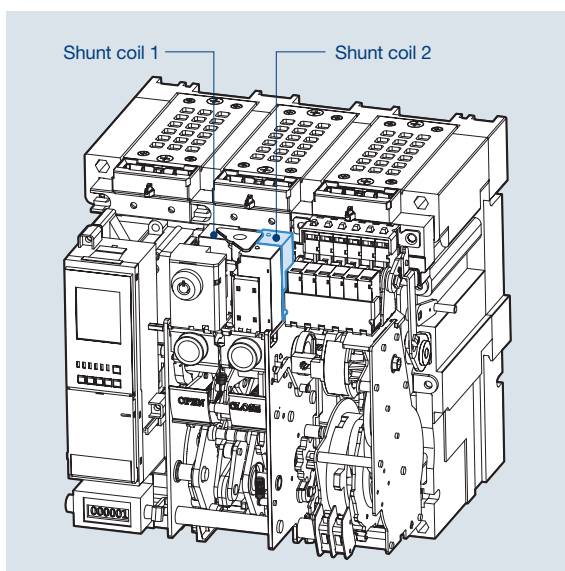


- SHT2 is a control device which trips a circuit breaker doubly from the outside. When SHT1 doesn't operate normally, it can trip a circuit breaker safely.
- Shunt coil 1: Install it at existing location.
- Shunt coil 2: Install it on the right side of the Shunt coil 1
- It is not available with UVT coil when installing double shunt coil.

1. Rated voltage and characteristics of trip coil

Rated voltage (Vn)		Operating voltage range (V)	Power consumption (VA or W)		Trip time (ms)
DC (V)	AC (V)		Inrush	Steady-state	
24~30	-	0.7~1.1 Vn	200	5	Less than 40ms
48~60	48	0.7~1.1 Vn			
100~130	100~130	0.7~1.1 Vn			
200~250	200~250	0.7~1.1 Vn			
-	380~480	0.7~1.1 Vn			

Note) Operating voltage range is the min. rated voltage standard for each rated voltage(Vn).

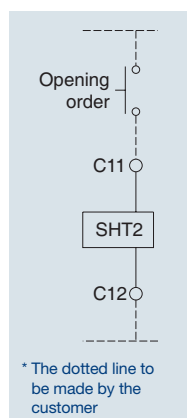

Wiring Diagram

2. Specification of the wire

- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30V or DC / AC 48~60V of rated voltage.


The maximum wire length

Wire type		Rated voltage (Vn)			
		DC 24~30V		DC / AC 48V	
		#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)	#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)
Operating voltage	100%	95.7m	61m	457.8m	287.7m
	85%	62.5m	38.4m	291.7m	183.2m

Accessories

Susol · Metasol

Closing Coil [CC]

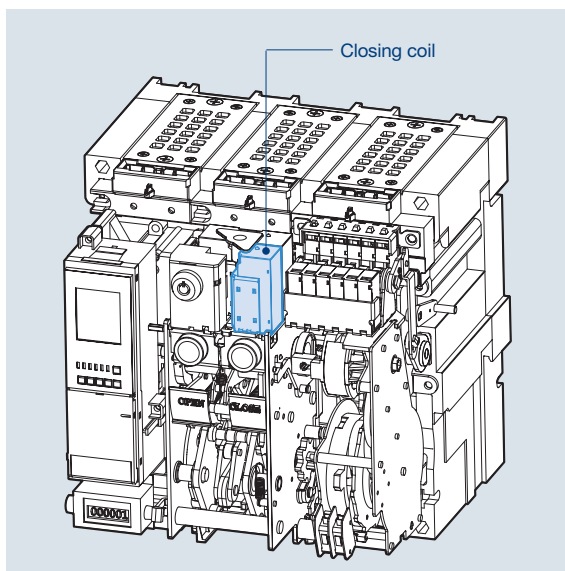


- It is a control device which closes a circuit breaker, when the voltage is applied continuously or instantaneously over 200ms to the coil terminals (A1, A2).

1. Rated voltage and characteristics of Closing coil

Rated voltage (Vn)		Operating voltage range (V)	Power consumption (VA or W)		Shunt time (ms)
DC (V)	AC (V)		Inrush	Steady-state	
24~30	-	0.85~1.1 Vn	200	5	Less than 80ms
48~60	48	0.85~1.1 Vn			
100~130	100~130	0.85~1.1 Vn			
200~250	200~250	0.85~1.1 Vn			
-	380~480	0.85~1.1 Vn			

Note) Operating voltage range is the min. rated standard for each rated voltage (Vn).

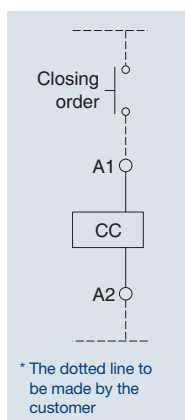

Wiring Diagram



2. Specification of the wire

- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30V or DC / AC 48~60V of rated voltage.

The maximum wire length

		Rated voltage (Vn)			
		DC 24~30V		DC / AC 48V	
Wire type		#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)	#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)
Operating voltage	100%	95.7m	61m	457.8m	287.7m
	85%	62.5m	38.4m	291.7m	183.2m

Motor [M]

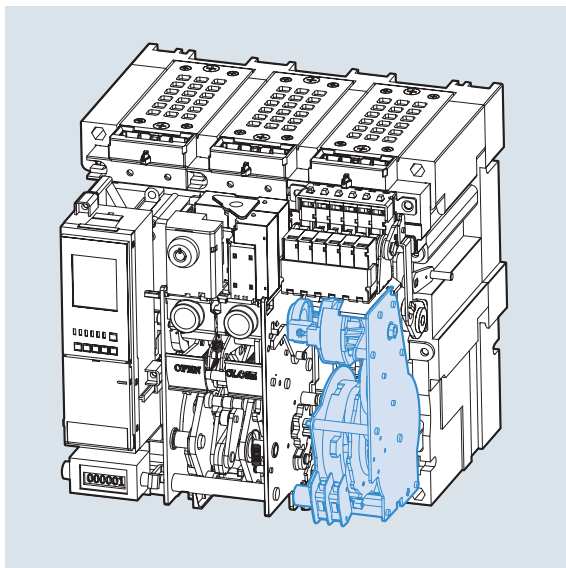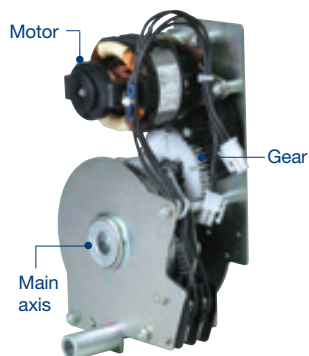

- Charge the closing spring of a circuit breaker by the external power source. Without the external power source, charge manually.
- Operating voltage range (IEC 60947)
85%~110%Vn

Input voltage (V)	DC 24~30V	AC/DC 48~60V	AC/DC 100~130V	AC/DC 200~250V	AC 380V	AC 440~480V
Load current (max.)	5A	3A	1A	0.5A	0.3A	0.3A
Starting current (Max.)	5 times of load current					
Load rpm (Motor)	15000 ~ 19000 rpm					
Charge time	Less than 5sec.					
Dielectric strength	2kV/min					
Using temperature range	-20° ~ 60°					
Using humidity range	Max. RH 80% (No dew condensation)					
Charge switch	10A at 250VAC					

Susol

Type	AH-D	AH-E	AH-G
Endurance	20,000	15,000	10,000

Metasol

Type	AN, AS-D	AN, AS-E	AS-F	AS-G
Endurance	20,000	15,000	10,000	10,000

* Unit: Cycle (Frequency 2 cycles/ min)


Charge Switch [CS1]

Charge Switch Communication [CS2]

Accessories

Susol · Metasol

Under Voltage Trip device [UVT]

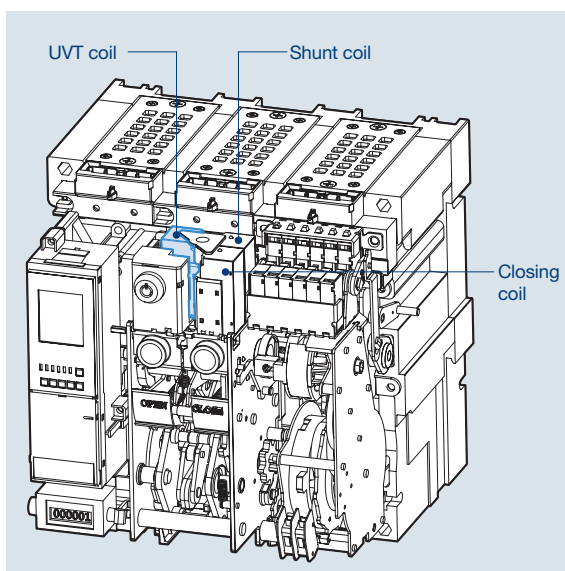

- If the voltage of the main or the control power is under voltage, UVT which is installed inside of the breaker breaks the circuit automatically. Please connect with UVT time-delay device in order to present the time-delay function because UVT is technically instantaneous type.
- The closing of a circuit breaker is impossible mechanically or electrically if control power not supplied to UVT. To close the circuit breaker, 65~85% of rated voltage should be applied to both terminals of UVT coil (D1, D2).
- When using UVT coil, the double trip coil can not be used, and the location of trip coil is changed.

1. Rated voltage and characteristics of UVT coil

Rated voltage (Vn)		Operating voltage range (V)		Power consumption (VA or W)		Trip time (ms)
DC (V)	AC (V)	Pick up	Drop out	Inrush	Steady-state	
24~30	-	0.65~0.85 Vn	0.4~0.6 Vn	200	5	Less than 50ms
48~60	48					
100~130	100~130					
200~250	200~250					
-	380~480					

Note) Operating voltage range is the min. rated standard for each rated voltage (Vn).

2. Specification of the wire


- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30V or DC/AC 48~60V of rated voltage.

The maximum wire length

Wire type		Rated voltage (Vn)			
		DC 24~30V		DC / AC 48V	
		#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)	#14 AWG (2.08mm ²)	#16 AWG (1.31mm ²)
Operating voltage	100%	48.5m	30.5m	233.2m	143.9m
	85%	13.4m	8.8m	62.5m	39.3m

Note) In case of using UVT coil, the location of Shunt coil is changed.

Trip Alarm Contact [AL]

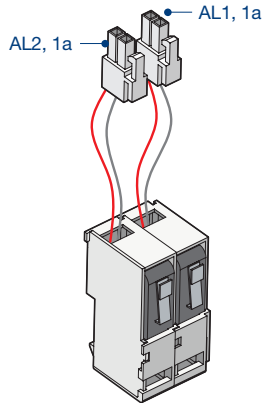

- When a circuit breaker is tripped by OCR which operates against the fault current (Over Current Relay), Trip Alarm switch provides the information regarding the trip of circuit breaker by sending the electrical signal from the mechanical indicator on front cover of main circuit breaker or internal auxiliary switch. (Installed at the inside of circuit breaker)
- When a circuit breaker tripped by fault current, a mechanical trip indicator (MRB, Manual Reset Button) pops out from the front cover and the switch (AL) which sends control signal electrically is conducted to output the information occurred from fault circuit breaker.
- MRB and AL can be operated only when tripping by OCR, but doesn't be operated by Off button and OFF operation of trip coil.
- To re-close a circuit breaker after a trip, press MRB to reset it for closing.
- 2pcs of electrical trip switch (AL1, AL2, 1a) are provided (Option)
- Trip alarm contact and MRB(Manual reset bottom) need to be purchased together.

1. Electrical characteristics of trip alarm contact


Rated voltage (V)	Non-inductive load (A)		Inductive load (A)		Inrush current
	Resistive load	lamp load	Inductive load (A)	Motor load	
8V DC	11	3	6	3	MAX. 24A
30V DC	10	3	6	3	
125V DC	0.6	0.1	0.6	0.1	
250V DC	0.3	0.05	0.3	0.05	
250V AC	11	1.5	6	2	

Manual Reset Button [MRB]




- It is a function which resets a circuit breaker manually when a circuit breaker is tripped by OCR.
- When a circuit breaker tripped by fault current, a mechanical trip indicator (MRB, Manual Reset Button) pops out from the front cover and the switch (AL) which sends control signal electrically is conducted to output the information occurred from fault circuit breaker.
- MRB can be operated only by OCR but not by OFF operation of circuit breaker. To re-close a circuit breaker after a trip, press MRB to reset it for closing.

Manual Reset Button

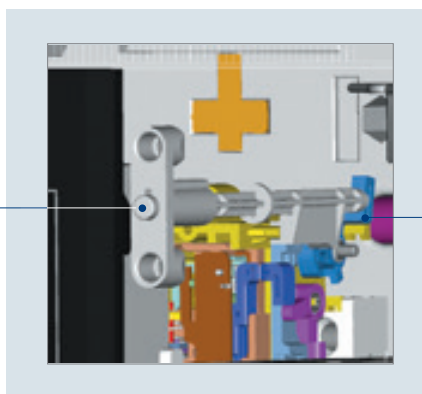

Manual Reset Button

MRB reset lever

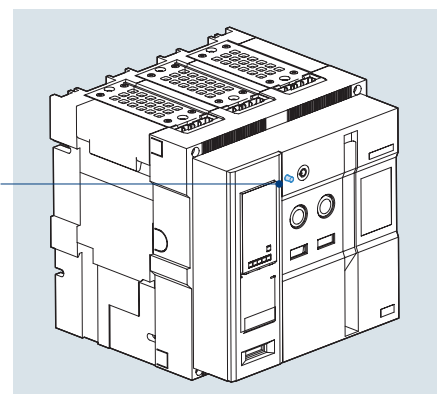

Note) The manual reset button is protruded in the event of trip.

Accessories


Susol • Metasol

Remote Reset Switch [RES]


- Following tripping, this function resets the "fault trip" alarm contacts (AL) and the mechanical indicator (MRB) and enables circuit breaker closing.
Push button switch: AC 125V 10A, AC 250V 6A, DC 110V 2.2A, DC 220V 1.1A Resistive load
- In case of auto reset type circuit breaker
Following tripping, a reset of Manual Reset Button (MRB) or Remote Reset Switch (RES) is no longer required to enable circuit breaker closing.
The mechanical indicator (MRB) and electrical indicator (AL) remain in fault position until the reset button is pressed.
- AL2 and RES are alternative.

1. Rated voltage and rated current of RES


Rated voltage	Operating current (Max.)		Operating time	Wire spec.
AC 110~130V	AC	6A	Less 40ms	#14 AWG (2.08 mm ²)
DC 110~125V	DC	5A		
AC/DC 200~250V	AC	3A		#16 AWG (1.31 mm ²)
	DC	2.5A		

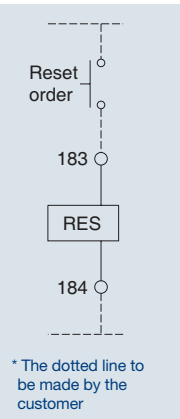

Wiring Diagram

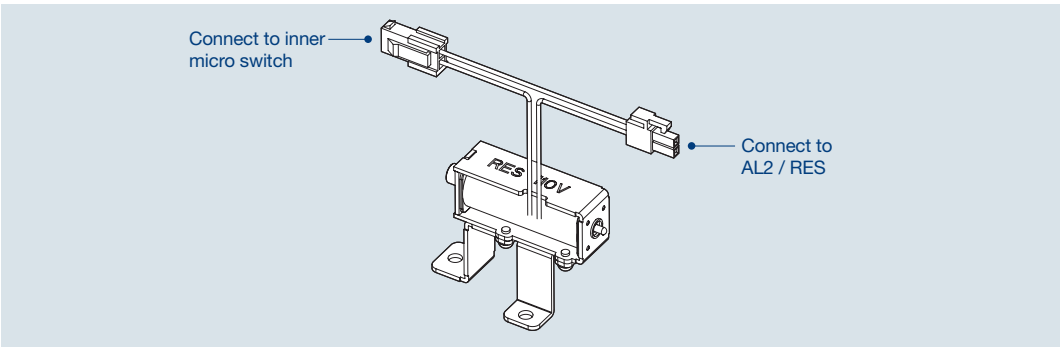



Ready to Close Switch [RCS]

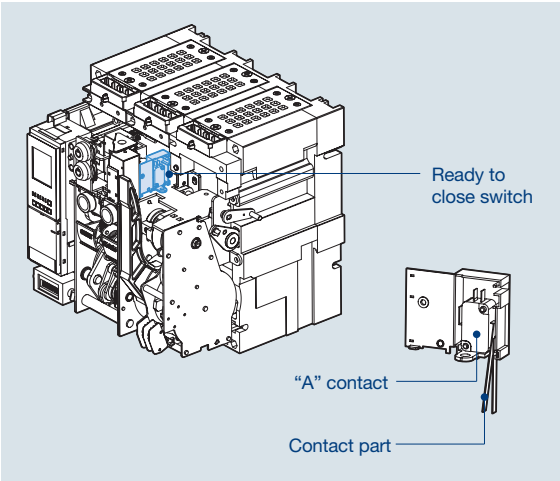

- It interlocks with mechanism of circuit breaker.
- It indicates the status that the circuit breaker is ready to do closing operation.
- When mechanism is in OFF position or in Charge, contact is output with "ON" and it indicates that mechanism can be closed.

Classification	Standard		Remark
Contactor Capacity	250/125 Vac	10 A	
	250 Vdc	0.3 A	
	125 Vdc	0.6 A	
	48 Vdc	3 A	
	24 Vdc	5 A	



Auxiliary switch [AX]

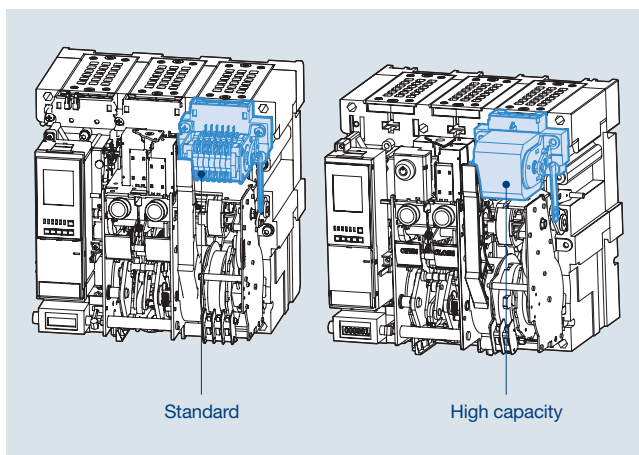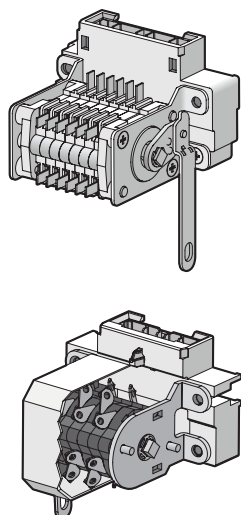

- It is a contact used to monitor ON / OFF position of ACB from remote place.

AUX. contact & charging types	
AX	Standard OFF charge 3a3b
AC	Standard ON charge 3a3b
BX	Standard OFF charge 5a5b
BC	Standard ON charge 5a5b
HX	High capacity OFF charge 5a5b
HC	High capacity ON charge 5a5b
CC	Standard ON charge 6a6b
JC	High capacity ON Charge 6a6b
GX	High capacity OFF charge 3a3b
GC	High capacity ON charge 3a3b

Standard classification

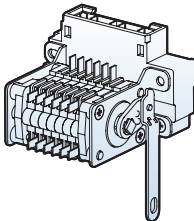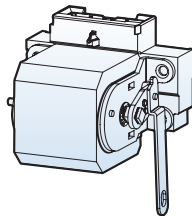
Standard		High capacity	
2000, 5000AF	4000, 6300AF	2000, 5000AF	4000, 6300AF
			

Classification			Standard		High capacity		Remark
			Resistive load	Inductive load	Resistive load	Inductive load	
Minimum current			DC24V, 5mA		DC5V, 1mA		
Contact capacity	AC	490V	5A	2A	5A	2.5A	
		250V	10A	6A	10A	10A	
		125V	10A	6A	10A	10A	
	DC	250V	0.3A	0.3A	3A	1.5A	
		125V	0.6A	0.6A	10A	6A	
		30V	10A	6A	10A	10A	
No. of Contact that can be used		AX	3a3b	-	-	-	Standard charging type
		BX	5a5b	-	-	-	
		HX	-	-	5a5b	-	
		GX	-	-	3a3b	-	
		AC	3a3b	-	-	-	Rapid auto-reclosing charging type
		BC	5a5b	-	-	-	
		CC	6a6b	-	-	-	
		HC	-	-	5a5b	-	
		JC	-	-	6a6b	-	
		GC	-	-	3a3b	-	

Accessories

Susol • Metasol


Key Lock [K1]

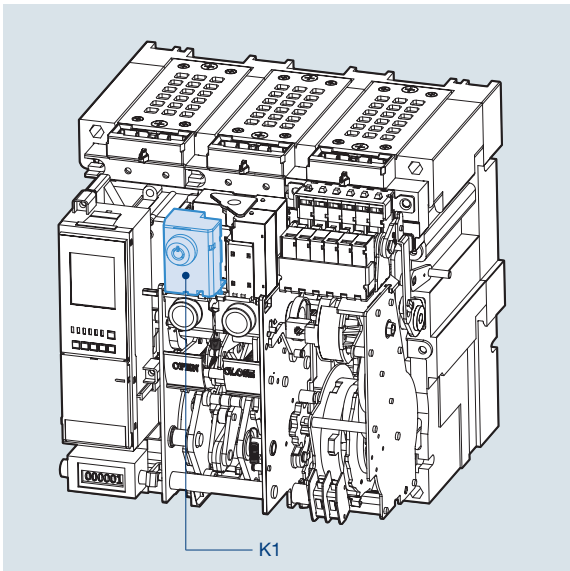

- It is a device for locking which prevents a certain circuit breaker from being operated by user's discretion when two or more circuit breakers are used at the same time.
- K1: Preventing mechanical closing

Key Interlock Set [K2]

Wiring

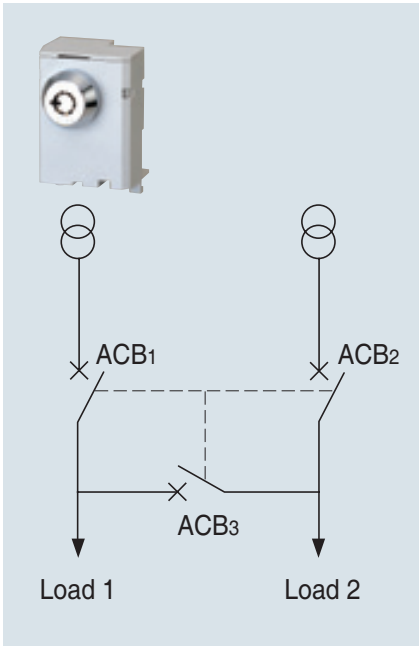


- 3 circuit breakers can be arranged for the continuous power supply to the load side and be interlocked mutually by using Key Lock embedded in each circuit breaker.

ACB-1	ACB-2	ACB-3	Status	
			LOAD1	LOAD2
●	●	●	OFF	OFF
●	○	○	ON	ON
○	●	○	ON	ON
○	○	●	ON	ON
●	●	○	OFF	OFF
●	○	●	OFF	ON
○	●	●	ON	OFF


○: Release ●: Lock

Double Key Lock [K3]

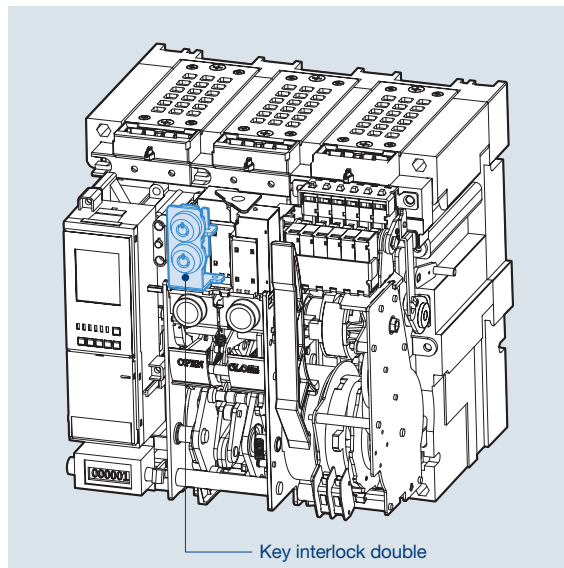

- When only two keys are released at the same time, circuit breakers operate. Handling method is same as K1.

ON/OFF Button Lock [B]

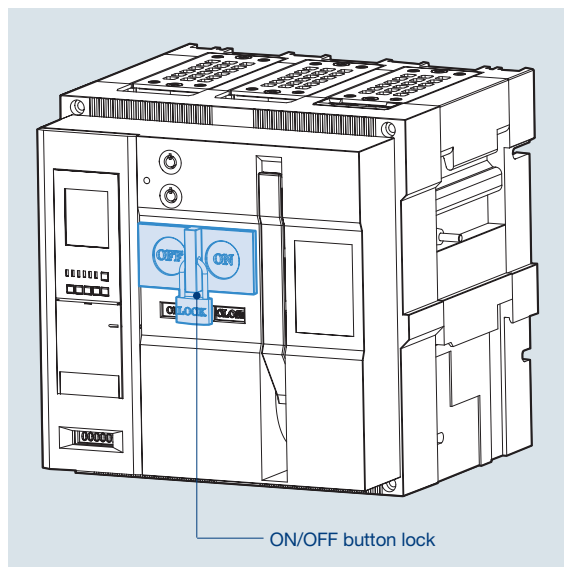


- It is to prevent manual operation of ACB's closing/tripping button due to user's wrong handling.
- It is not possible to handle ON/OFF operation under the "Button lock" status.

Note) Padlocks(Ø5 ~ Ø6) are not supplied.

Accessories

Susol • Metasol

Lifting Hook [LH]

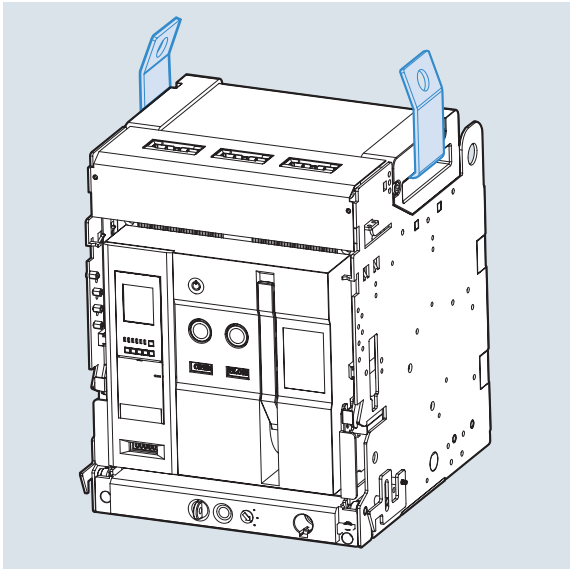

- It is a device to make an ACB easy to shift.
- Please hang it to both handles of the arc cover.

Condenser Trip Device [CTD]




- It gets a circuit breaker tripped electrically within regular time when control power supply is broken down and is used with Shunt coil, SHT. In case there is no DC power, It can be used as the rectifier which supplies DC power to a circuit breaker by rectifying AC power.


Ratings

Ratings	Specification	
Model	CTD-100	CTD-200
Rated input voltage (V)	AC 100/110	AC 200/220
Frequency (Hz)	50/60	50/60
Rated charge voltage (V)	140/155	280/310
Charging time	Within 5s	Within 5s
Trip possible time	Over 3 min	Over 2 min
Range of Input voltage (%)	85~110	85~111
Condenser capacity	400μF	160μF


External dimension

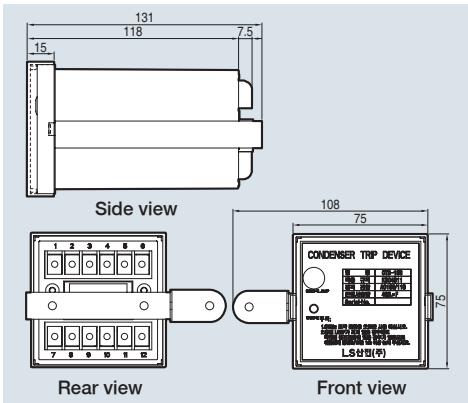

Circuit diagram

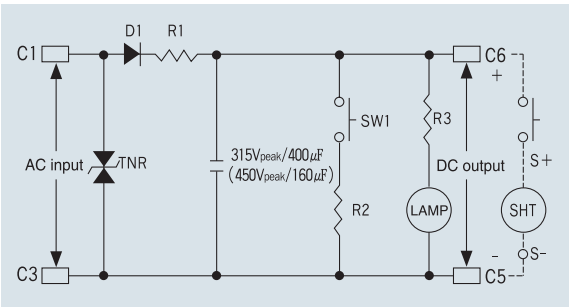

Automatic Transfer Switch Controller [ATS]

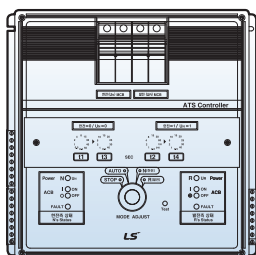

Ratings


Model type	ATSC-110	ATSC-220
Rated voltage	AC 110V	AC 220V
Voltage range	AC 93.5 (±5%) ~ 126.5V (±5%)	AC 187 (±5%) ~ 253V (±5%)
Frequency	50Hz/60Hz	
Power consumption (apparent power)	15.4W	
4-location switch (stop, N, R, Auto)	■	■
Time setting (t1~t4)	■	■
Fault function (OCR/Circuit breaker trouble)	■	■
Output contact (Auto, Load burden)	■	■

- t1: The delayed time from when UN (power supply of electric company) is tripped to when generator start-up signal contact is closed. (t1: 0.2, 0.5, 1, 2, 4, 8, 15, 30, 40, 50secs)
- t2: The delayed time from when UN is closed to when ACB₂ is tripped.
(t2: 0.2, 1, 2, 4, 8, 15, 30, 60, 120, 240secs)
- t3: The delayed time from when ACB₁ is tripped to when ACB₂ is closed.
(t3: 0.5, 1, 2, 5, 10, 15, 20, 25, 30, 40secs)
- t4: The delayed time from when ACB₂ is tripped to when ACB₁ is closed.
(t4: 0.5, 1, 2, 5, 10, 15, 20, 25, 30, 40secs)
- Stop-mode: This mode is for compulsory trip of ACB₁(electric power company) or ACB₂ (power station) when UN (power supply of electric power company) or UR (power supply of power station) is available
*UN or UR should be kept in ON position
- N-mode: This mode is for compulsory closing of ACB₁ when UN is available.
* it does not matter to be ON or OFF position of UR and if converting to N-mode while using UR, generator start-up signal contact is opened.
- R-mode: This mode is for compulsory closing of ACB₂ during the use of UR regardless of that UN is available or not.
- Auto-mode: This mode is for transferring a circuit breaker automatically to available power supply of UN or UR. In short, it trips the circuit breaker where power supply is not available and it close the circuit breaker where power supply is available.

Accessories

Susol • Metasol

OCR Tester [OT]

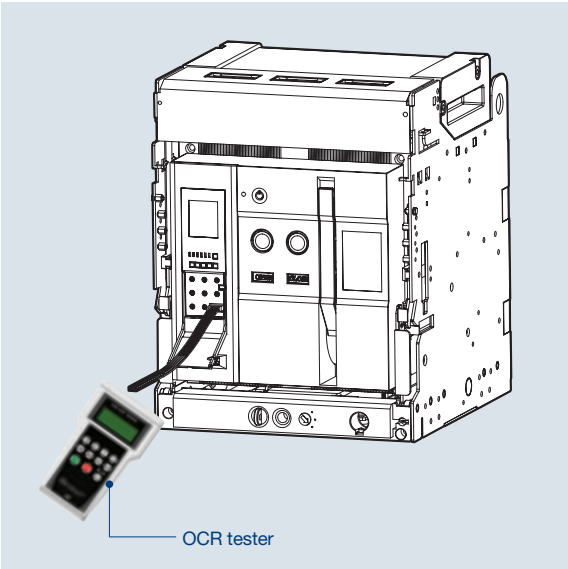



- It is a device which can test for the operation of Trip Relay under no power condition.
1. Maximum 17 times rated current can be inputted.
 2. It is possible to enter the current value and phase on each of R/S/T/N
 3. Frequency is adjustable.
 4. It is available to test for long time delay / short time delay / instantaneous / ground fault.

Configuration




<div>R</div> <div>S</div> <div>T</div> <div>N</div>	R, S, T, N phase signal input
<div>↶</div> <div>↷</div>	Increase/Decrease signal input
<div>ENT.</div> <div>ESC</div>	Signal setting/Delete
<div>START</div> <div>STOP</div>	Waveform generation/Stop
<div>50Hz 60Hz</div> <div>Hz</div>	Select frequency

Dust Cover [DC]

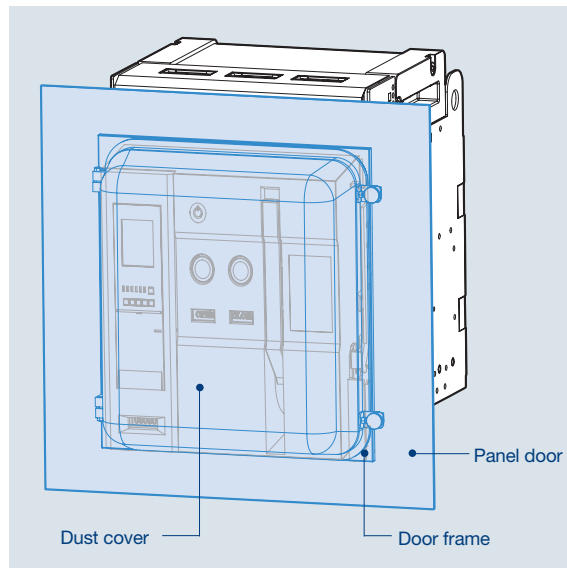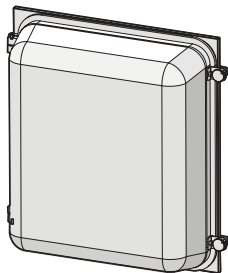


- Attach it to the door frame.
- It protects the product dust and moisture that may affect the operation of the instrument at the same time (IP54) which may cause fault operation and enhances the sealing degree by being mounted to protrude type of panel.
- It is transparent so that the front side of ACB is visible and the Cover can be opened/closed even if ACB is drawn out to until TEST position.

Counter [C]

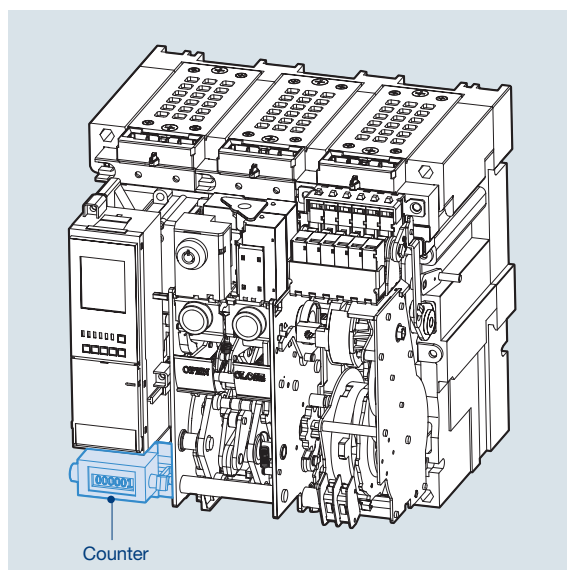


- It displays the total number of ON/OFF operation of ACB.

Mechanical Operated Cell Switch [MOC]

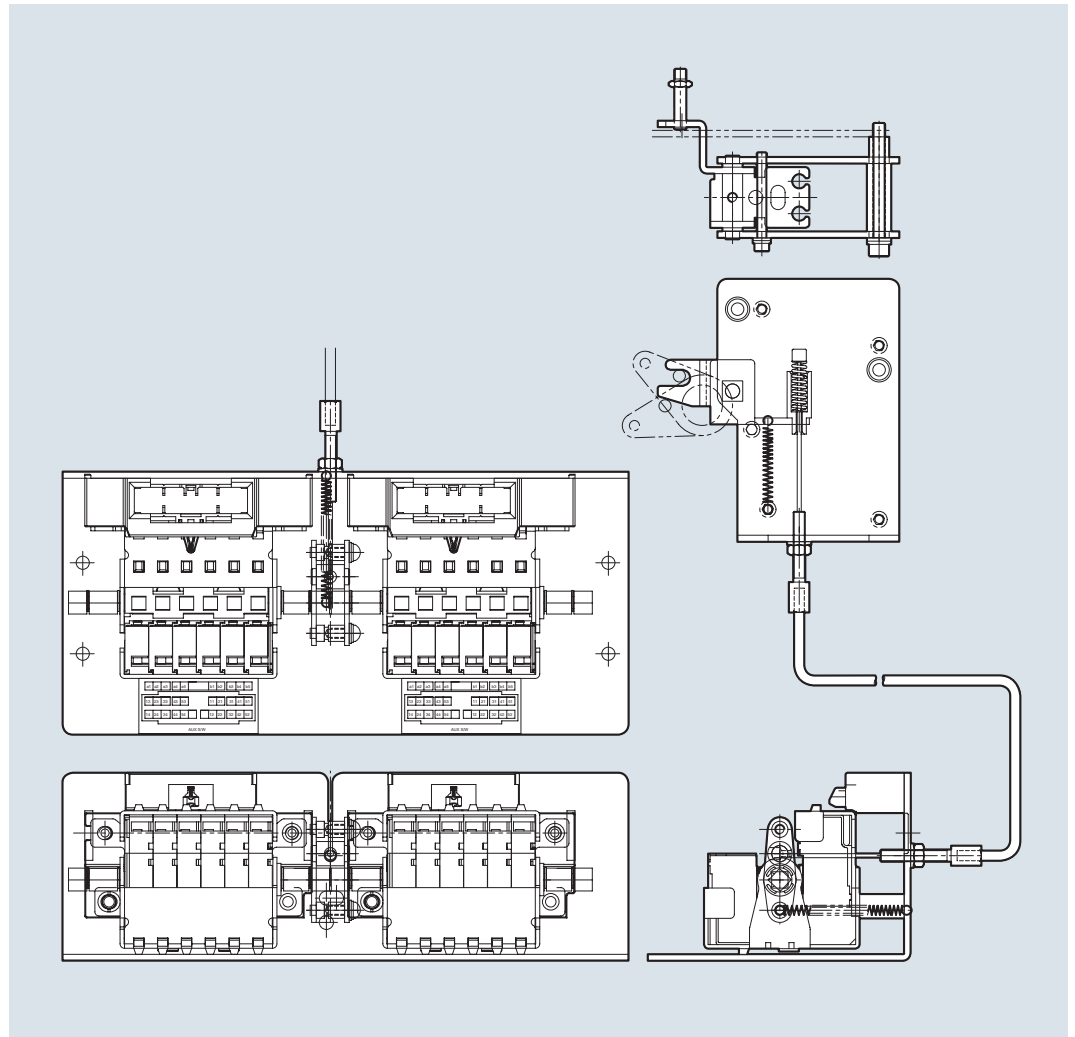


- It is the contact (10a10b) which displays the ON/OFF condition of ACB.
It mechanically operates only when the breaker is “CONNECTED” position.
A standard type and a high capacity type is available.
- The contact capacity is as same as the ratings of aux. contacts.
- When MOC link is installed to cradle, MOC can be equipped with the inside of panel.

Mechanical Interlock [MI]

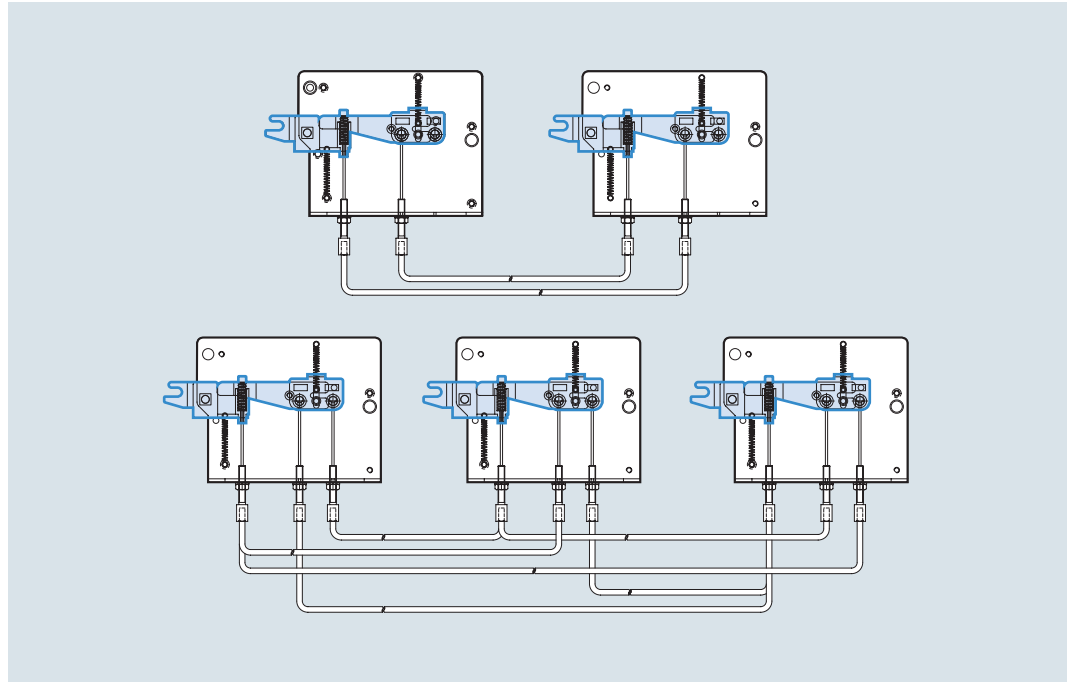

- It is used to interlock closing and trip between two or three breakers mechanically so as to prevent unintended operation at the same time.
- Wire type interlock can be applied upto 3 breakers

Door Interlock [DI]

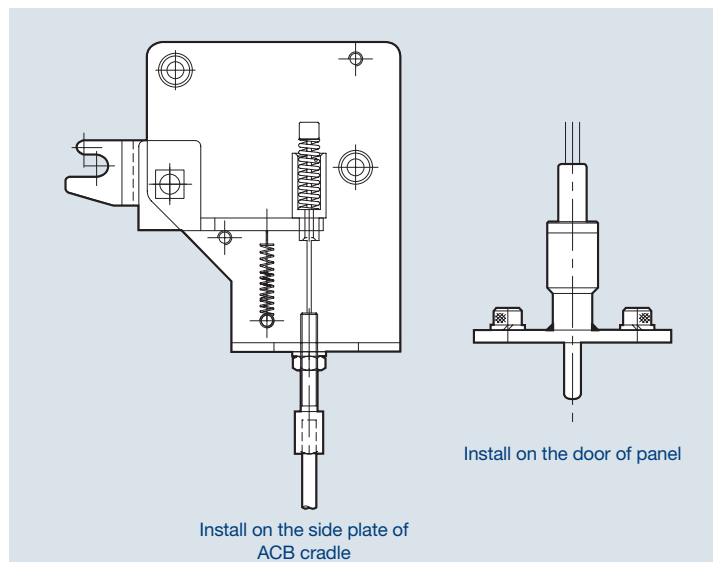


- It is a safety device which does not allow the panel door to open when a circuit breaker is in the "ON" position.





Accessories

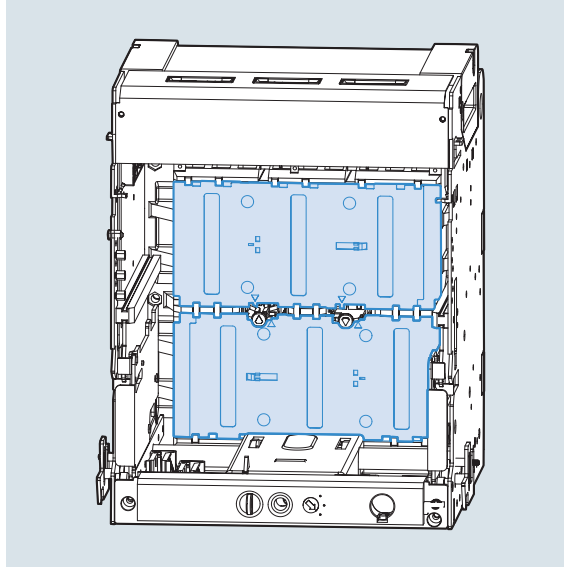Susol • Metasol


Safety Shutter [ST]



- It is the automatic safety device to protect the connectors of main circuit by cutting off dangerous contact from outside while the breaker is drawn out. When the ACB is drawn in, the shutter is automatically opened.
- There are 4 types of Safety Shutter and they are divided as shown in figure below.

The types of safety shutter plate	
2000/5000AF, 3P	4000/6300AF, 3P
	
2000/5000AF, 4P	4000/6300AF, 4P
	

Safety Shutter Lock [STL]

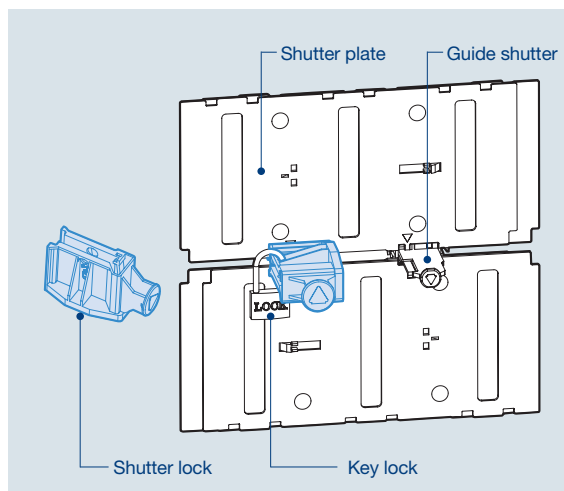

- It is a locking device which prevents safety shutter from being opened when it is closed.
- If shutter lock is connected with guide shutter, the guide shutter can not be pushed structurally. Thus, it is not available to open the safety shutter.

Note) Padlocks (Ø5 ~ Ø6) are not supplied.


Door Frame [DF]



Fixed type




Draw-out type

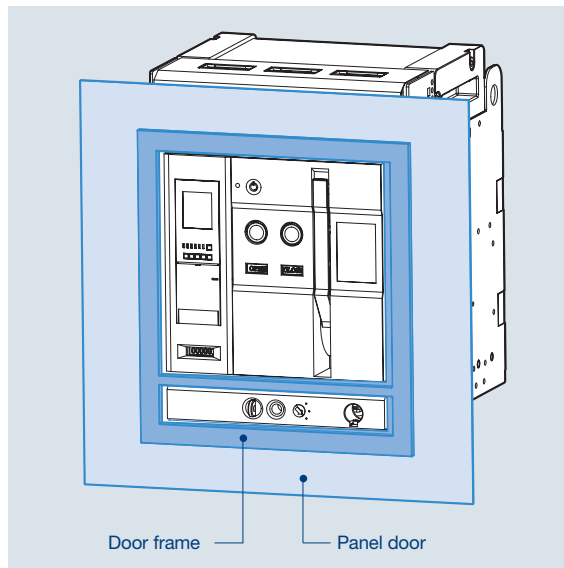

- When structuring the embedded type of ACB panel, it protects the protrude front of ACB and the cutting side of panel door by attaching it to the panel door.

Interphase Barrier [IB]


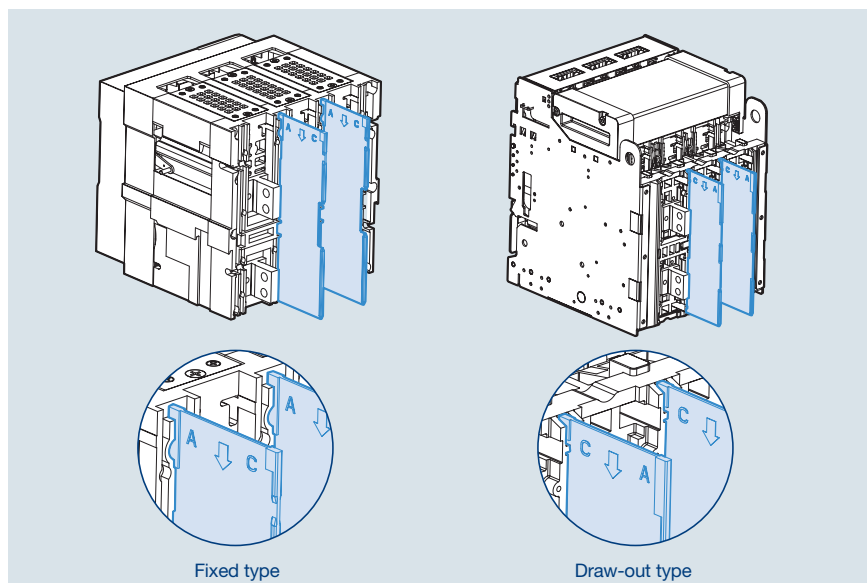


- Interphase barrier prevents the arc which may arise and result in short-circuit between phases in advance
- As “C” stands for “CRADLE”, install the Interphase barrier in the direction of “C” in case of Draw-out type.
- As “A” stands for “ACB main frame”, install the Interphase barrier in the direction of “A” in case of Fixed type.

Accessories

Susol・Metasol

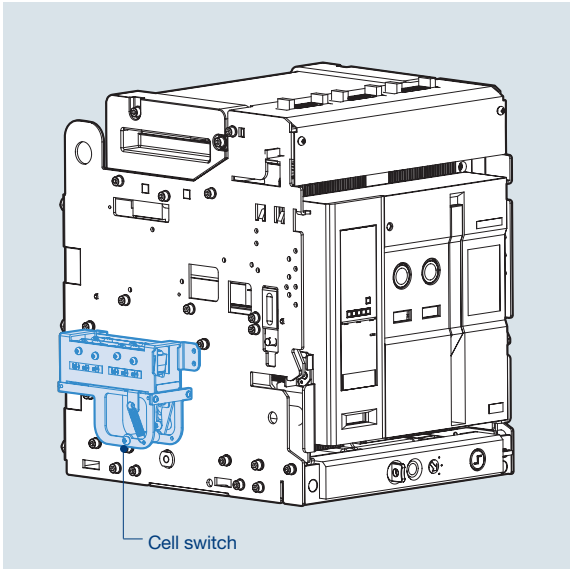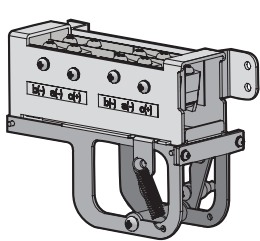


Cell Switch [CEL]




- It is a contact which indicates the present position of ACB. (CONNECTED, TEST, DISCONNECTED)

<Contact configuration>
 4C: 1Disconnected +1Test +2Connected
 8C: 2Disconnected +2Test +4Connected

※ Contact configuration can be changeable if necessary.

ACB position			DISCONNECTED		CONNECTED
Draw-in and draw-out position			DISCONNECTED	TEST	CONNECTED
Contact operation	CL-C (Connected)				
	CL-T (Test)				
	CL-D (Disconnected)				
Contact capacity	Voltage(V)		Resistive load		Inductive load
	AC	460V	5		2.5
		250V	10		10
		125V			
	DC	250V	3		1.5
		125V	10		10
30V		10		10	
Contact number			4C		



Terminal (4C, 8C)

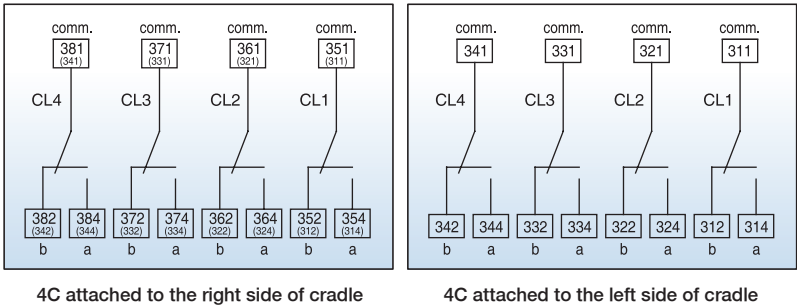

4C attached to the right side of cradle





4C attached to the left side of cradle

Shorting “b” Contact [SBC]

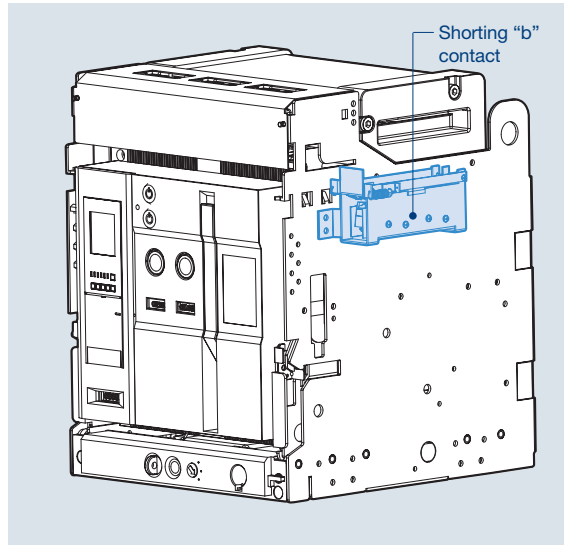
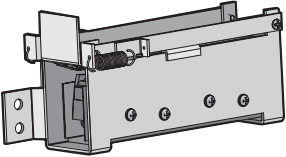


- It is the contact which keeps the external control circuit in normal by Aux. contact which disconnects “Axb” when ACB is moved from CONNECTED position to TEST position. The number of “shorting b-contact” corresponds to the number of “Axb” (4b)

Contact condition (Link between Axb and shorting “b” contact)

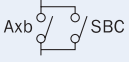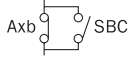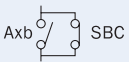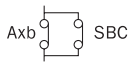ACB position	ACB condition	Close position [Auxiliary contact(Axb):OFF]	Open position [Auxiliary contact(Axb):ON]
Connected position (Shorting b contact : OFF)		Axb  SBC	Axb  SBC
	Test position (Shorting b contact : ON)	Axb  SBC	Axb  SBC

Zero Arc Space [ZAS]

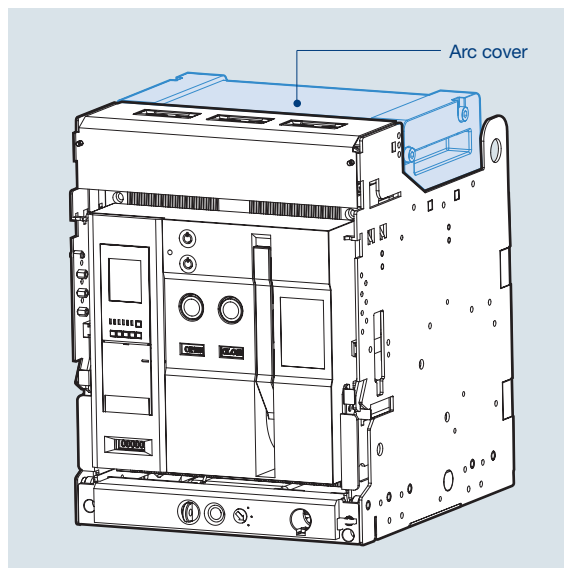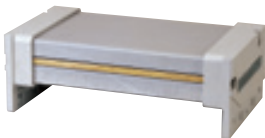

- Arc which may arise while breaking fault current is extinguished first by Arc chute in main body of circuit breaker and then completely extinguished by Arc cover. By preventing arc from exposing to the outside, it protects itself from all kinds of accidents.

- It is categorized into 8 types by ratings and poles.


Ampere frame	Cover length (mm)
2000AF 3P	281.4
2000AF 4P	366.4
4000AF 3P	359.4
4000AF 4P	474.4
5000AF 3P	576.4
5000AF 4P	746.4
6300AF 3P	732.4
6300AF 4P	962.4

* Zero Arc Space is only applicable for withdrawable type.

Accessories

Susol • Metasol

Safety Control Cover [SC]

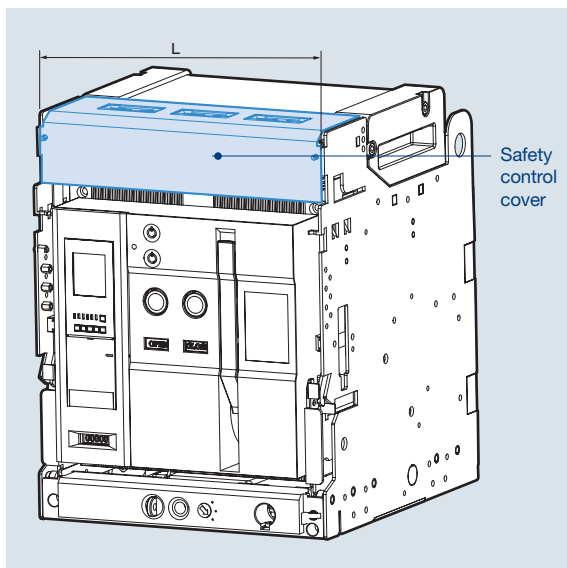


- It protects control terminals which are exposed to the outside, and prevents the damages resulting from foreign substances.

- It is categorized into 8 types by ratings and poles.

Ampere frame	Cover length (mm)
2000AF 3P	334
2000AF 4P	419
4000AF 3P	412
4000AF 4P	527
5000AF 3P	629
5000AF 4P	799
6300AF 3P	785
6300AF 4P	1015


- It is available only when the control block is in the mode of auto-connection.

Body Supporter [BSP]

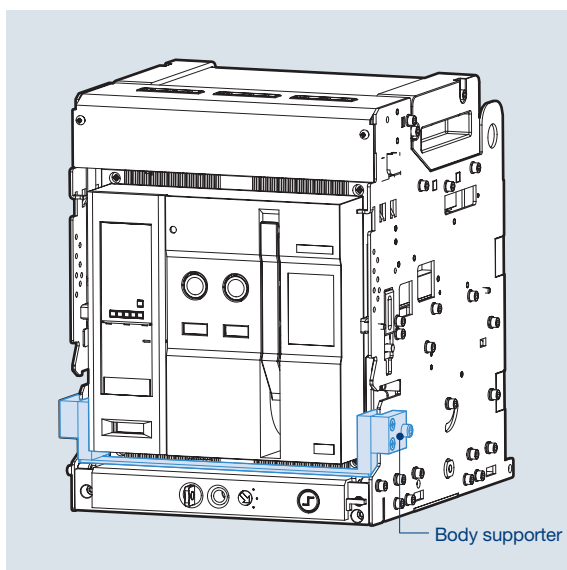


- It interlocks the main body of circuit breaker and cradle mechanically to fix the former in connected position. Therefore, all draw-in/outs are not available.

Racking Interlock [RI]

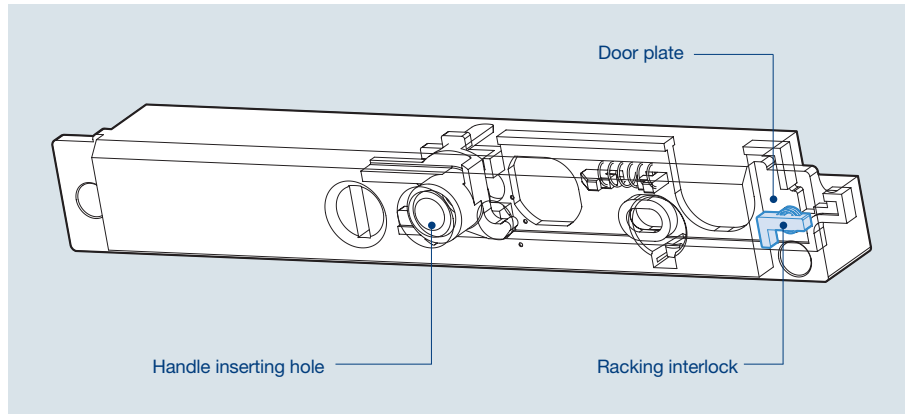

- When panel door is opened, Draw in/out handle doesn't be inserted. Thus, panel handle can be inserted only when panel door is closed.


Pad Lock / Position Lock [PL]

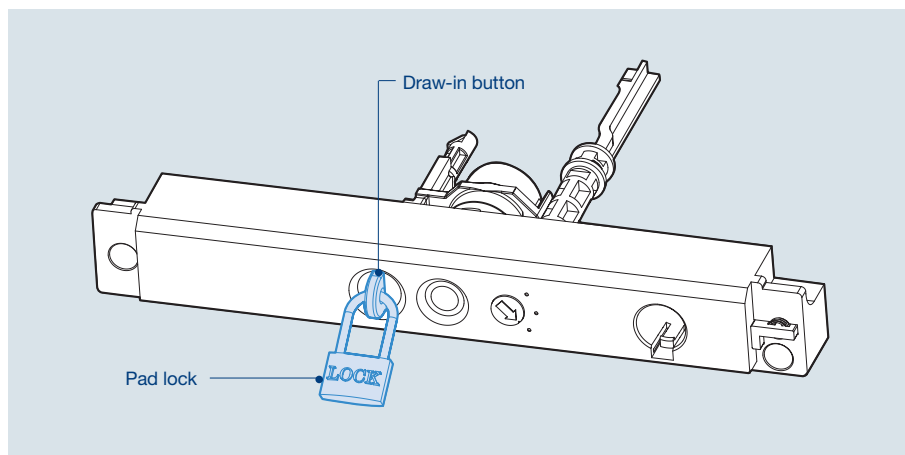

ACB is subject to restriction regarding moving in connected, test, disconnected when drawing in or out. If main body of ACB is placed in 3 positions, it is locked and stopped when drawing in or out.

- As shown in the figure, if draw-in/out button pops out, it means locking is operating.
- To continue Draw-in/out operation, release lock by pushing Draw-in/out button
- In case it is locked as shown in the figure above, main body of ACB can not be drawn in or out into the cradle.
- For the lock device, user has to purchase it. (Ø5 ~ Ø6)



Miss Insertion Prevent Device [MIP]

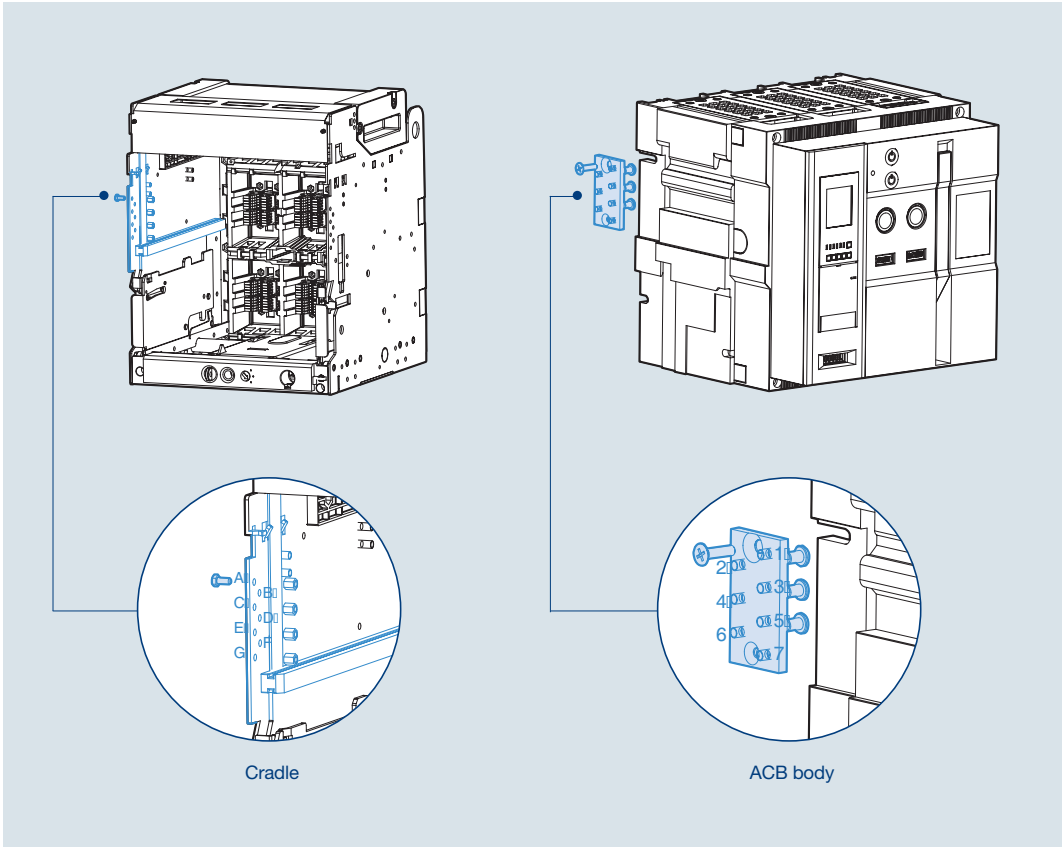

- When the main body of ACB is inserted to the cradle, if the ratings of ACB does not match with cradle, it mechanically prevents ACB from being inserted into cradle of ACB.
- The installation method is variable according to ratings.

Cradle	ACB	Cradle	ACB	Cradle	ACB	Cradle	ACB
ABCD	567	ADEF	237	ABEG	346	BCEG	146
ABCE	467	ADEG	236	ABFG	345	BDEF	137
ABCF	457	ADFG	235	ACDE	267	BDEG	136
ABCG	456	AEFG	234	ACDF	257	BDFG	135
ABDE	367	BCDE	167	ACDG	256	CDEF	127
ABDF	357	BCDF	157	ACEF	247	CDEG	126
ABDG	356	BCDG	156	ACEG	246	CEFG	124
ABEF	347	BCEF	147	ACFG	245	DEFG	123

UVT Time Delay Controller [UDC]

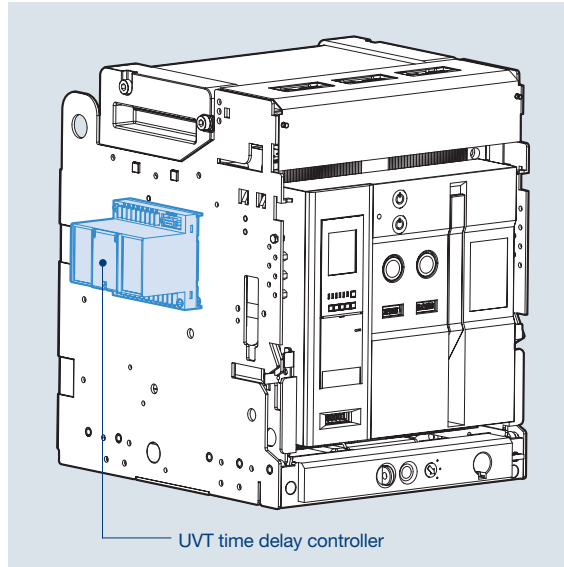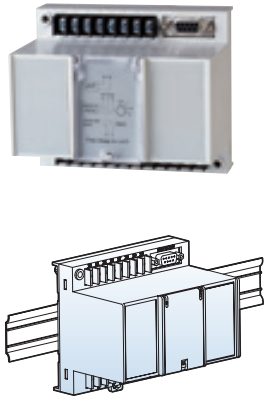


- UVT is a device which makes ACB tripped automatically to prevent the accident on load side due to under voltage or power breakdown. There are two types, Instantaneous type and time delay type.
- It can be installed on the rail or to the cradle.
- Instantaneous type: only available with UVT coil.
- Time delay type: available by connecting UVT coil and UVT time delay controller.
- Common use for the all types.

1. The rated voltage and characteristic of UVT time delay controller

Rated voltage (Vn)		Operating voltage range (V)		Power consumption (VA or W)		Trip time (s)
DC (V)	AC (V)	Pick up	Drop out	Inrush	Steady-state	
48~60	48	0.65~0.85 Vn	0.4~0.6 5Vn	200	5	0.5, 1, 1.5, 3
100~130	100~130					
200~250	200~250					
-	380~480					

Note) Operating voltage range is the min. rated standard for each rated voltage (Vn).

2. Wiring

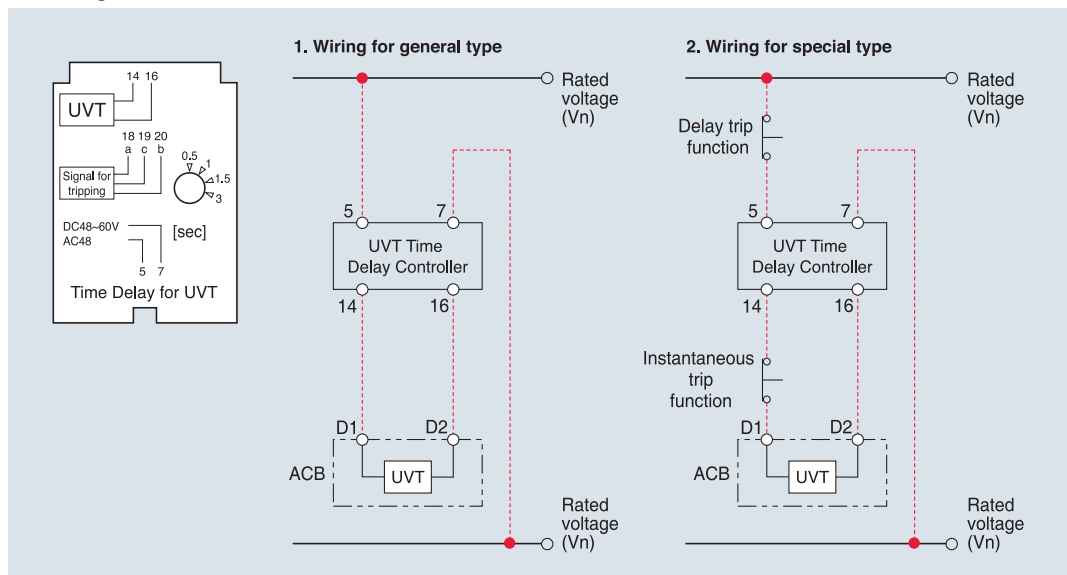



* The wiring presented with red color should be set by users.

Accessories

Susol • Metasol

Temperature Remote I/O Unit [TRIO Unit]



Temperature monitoring function

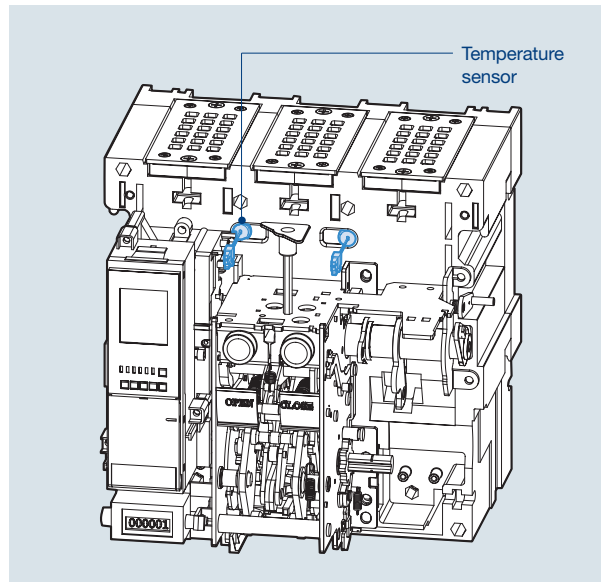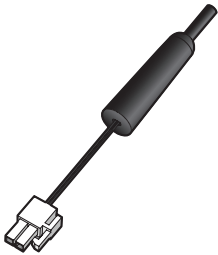


- TRIO unit is a device to show the temperature through a sensor inside of ACB.
- The temperature sensor can be installed up to 2 and the output is connected to control terminal blocks.
- It displays the maximum temperature of them and transmits through a network.
- If the temperature is higher than a standard, an alarm can occur.
- TRIO unit communicates with Modbus / RS-485 basically, Profibus-DP need to be purchased separately.
- TRIO unit is installed on the cradle or the inside of panel.




TRIO UNIT

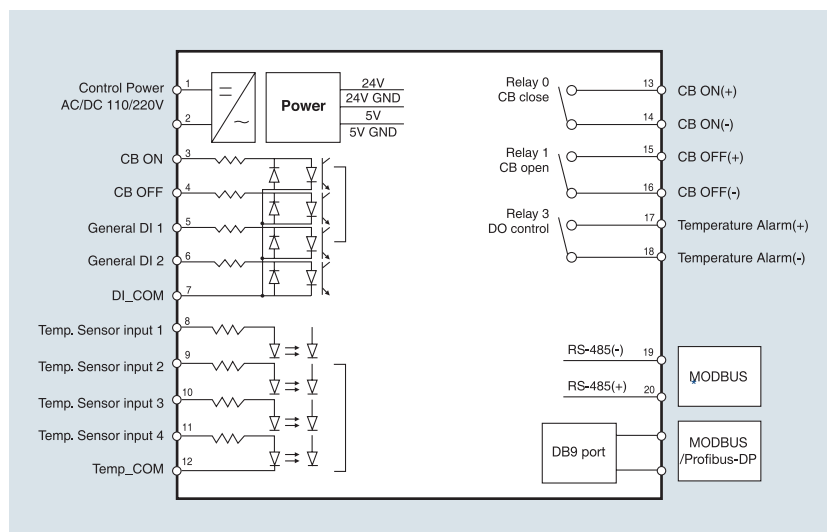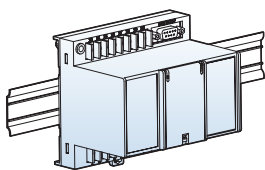

* DB9 Port is connected only when a repeater is used.

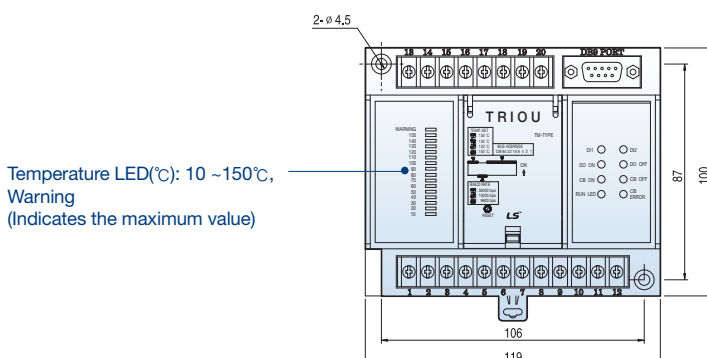

Remote control function (CB ON/OFF)

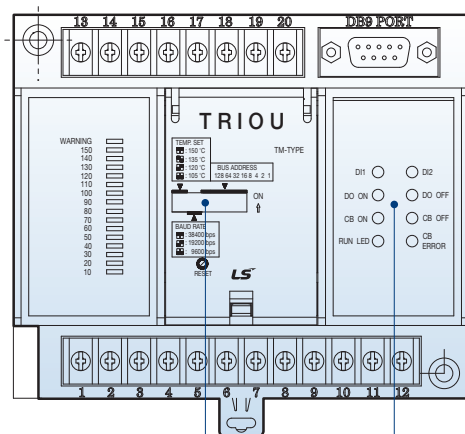

- Baud rate setting
- Comm. address setting
- Temperature setting

- TRIOU unit has the I/O contact which can trip or close the ACB from the remote site by communication.
- It supports SBO (Select Before Operation) function

LED		Status
1	DI1	Indicates digital Input #1condition
2	DI2	Indicates digital Input #2condition
3	DO ON	Indicates temperature alarm output is ON
4	DO OFF	Indicates temperature alarm output is OFF
5	CB ON	Indicates circuit break close condition
6	CB OFF	Indicates circuit break open condition
7	RUN LED	Indicates unit run condition
8	CB ERROR	Indicates circuit break terminal Disconnection / control Err condition

Classification		Applied range	Remarks
CB control	Contact switching capacity	AC230V 16A/DC30V 16A	
	Max. switching capacity	3680VA, 480W	
Alarm	Contact switching capacity	AC230V 6A/DC25V 6A	Induction load (cos ϕ =0.4, L/R=7ms)
	Max. switching capacity	1880VA, 150W	